

208020 " 695T 200F

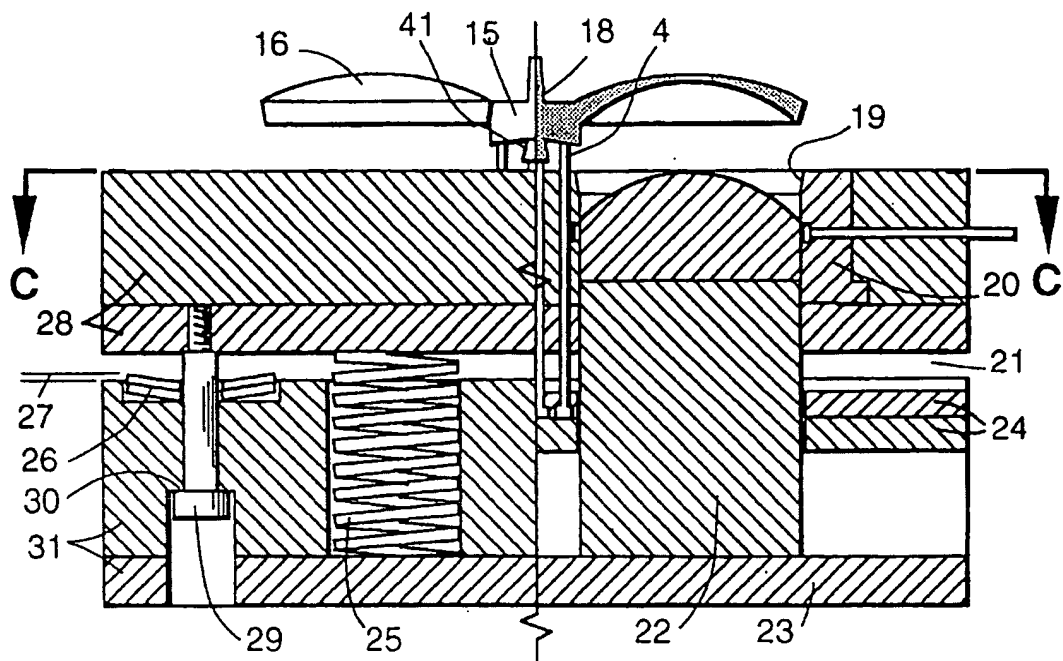


FIG. 1

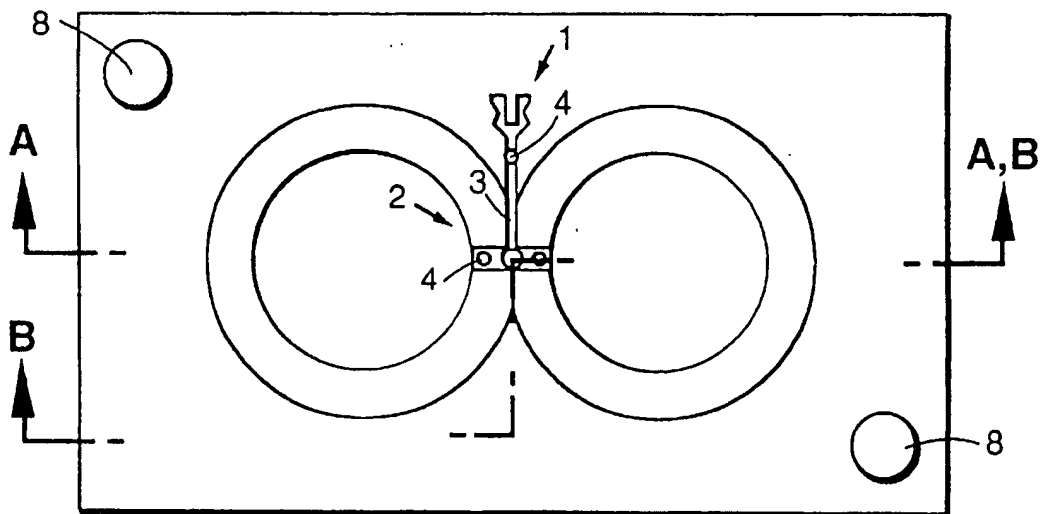


FIG. 1A

FIG. 1B

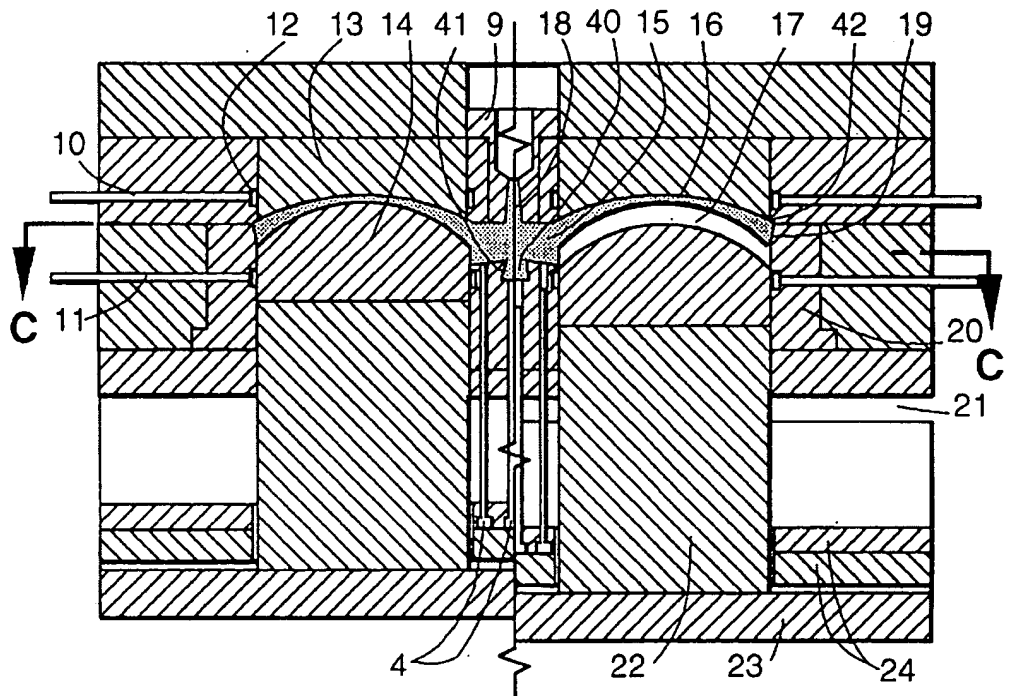


FIG. 2
Comparative Example

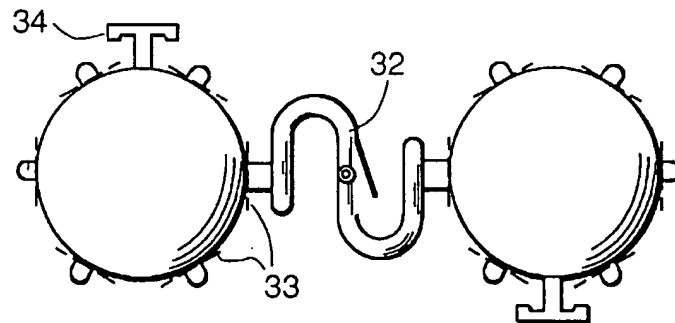
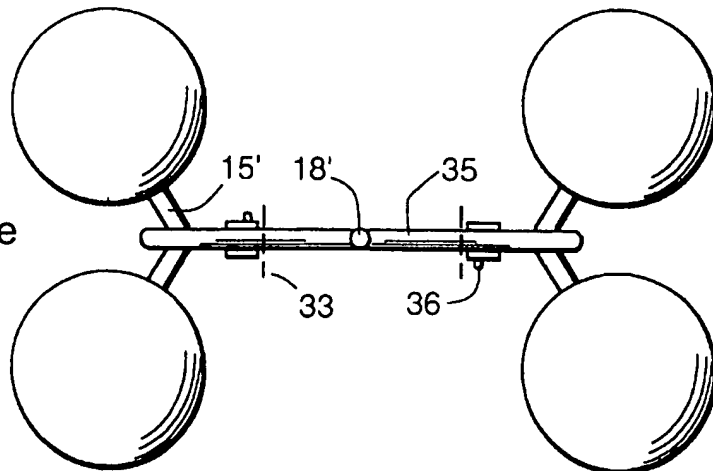


FIG. 2A
Comparative Example



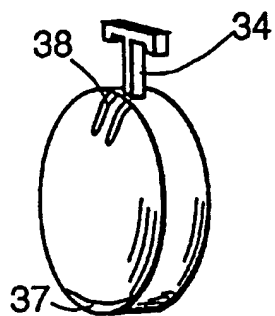


FIG. 2C
Comparative Example

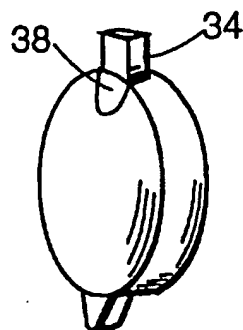


FIG. 2D
Comparative Example

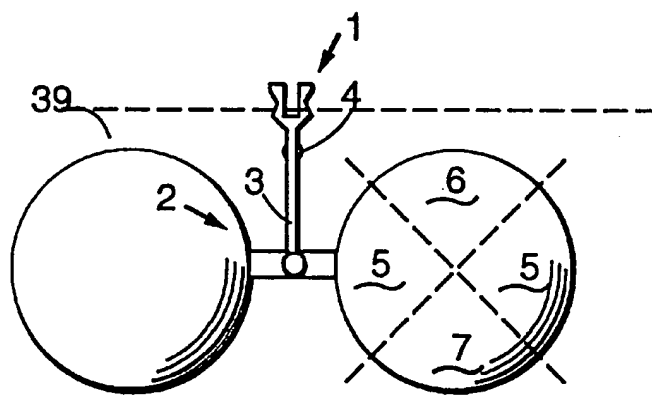


FIG. 3

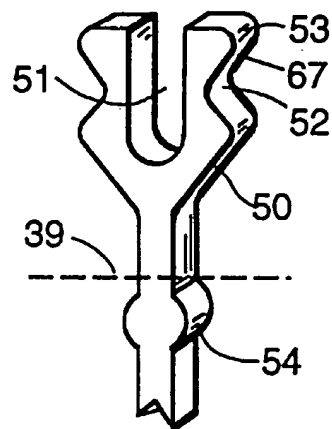


FIG. 3A

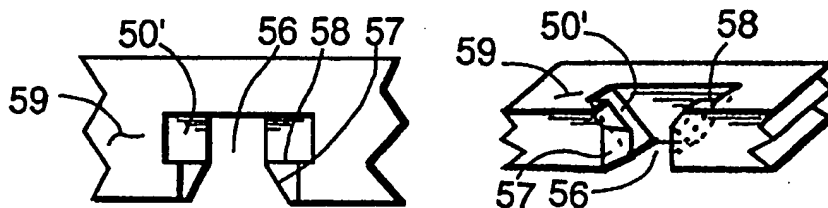


FIG. 3B

FIG. 3C

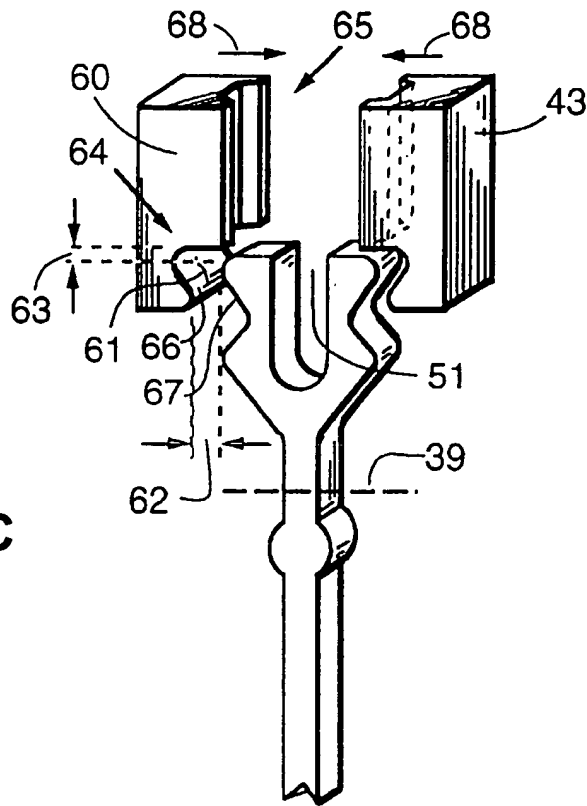
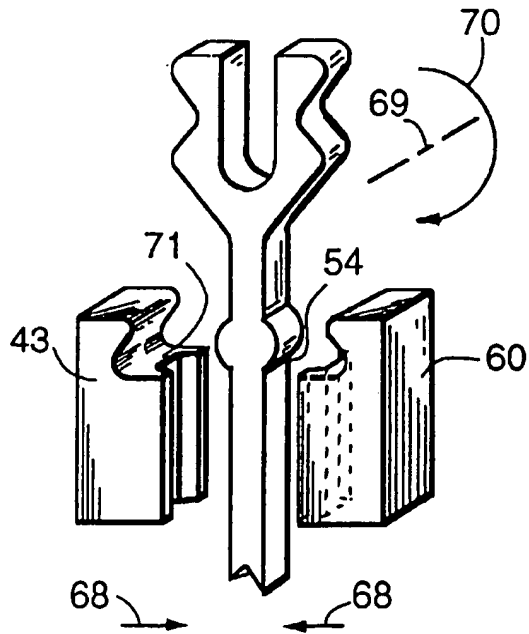


FIG. 3D



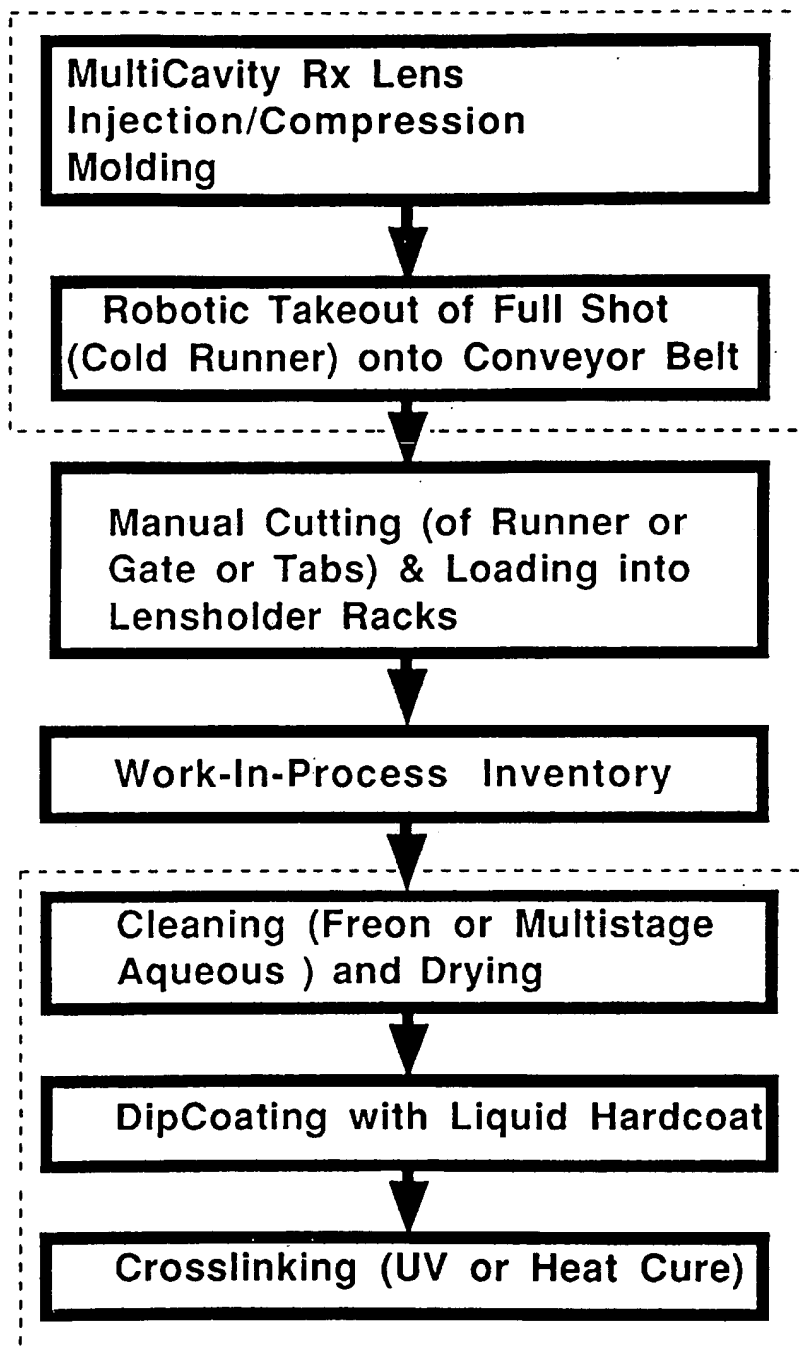


FIG. 4A:
Comparative Example
("Batch Process")

208020" 695T 400T

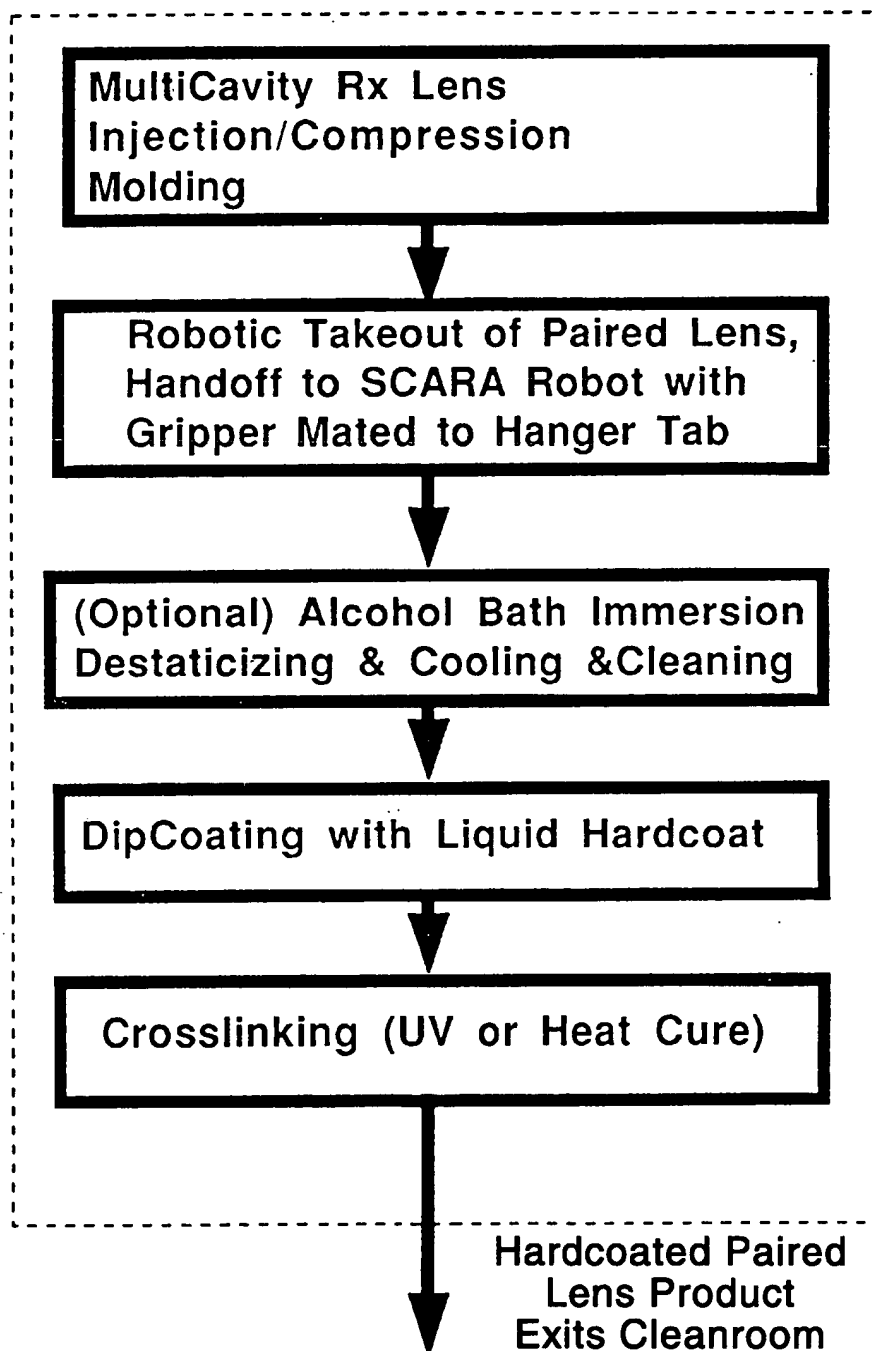


FIG. 4B:
Automated "Mold And Dipcoat"
("Continuous Process")

200001569.020002

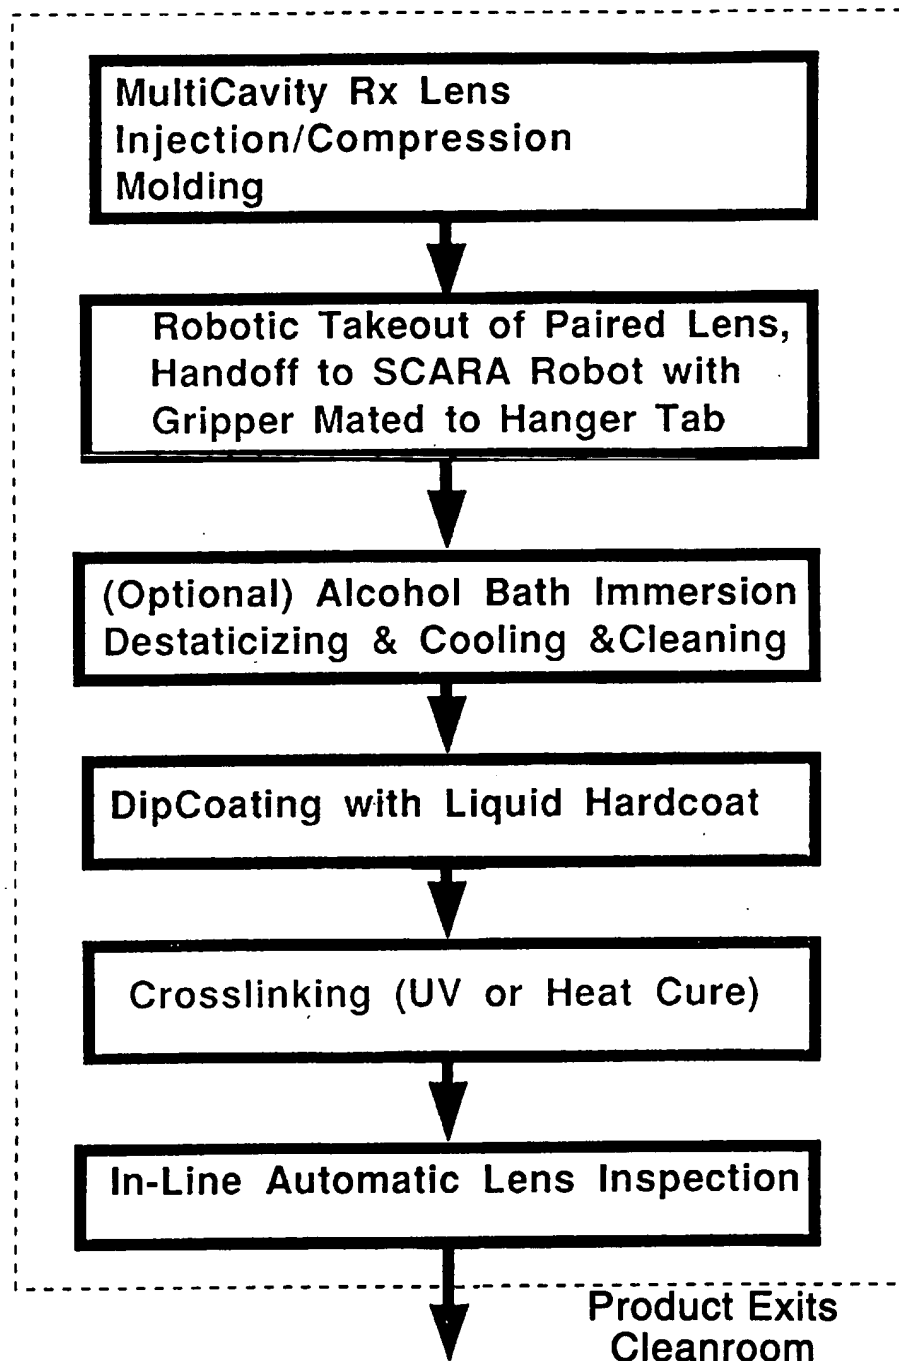


FIG. 4C:
In-Line Automated Inspection of Mold and Dipcoat"
("Continuous Process")

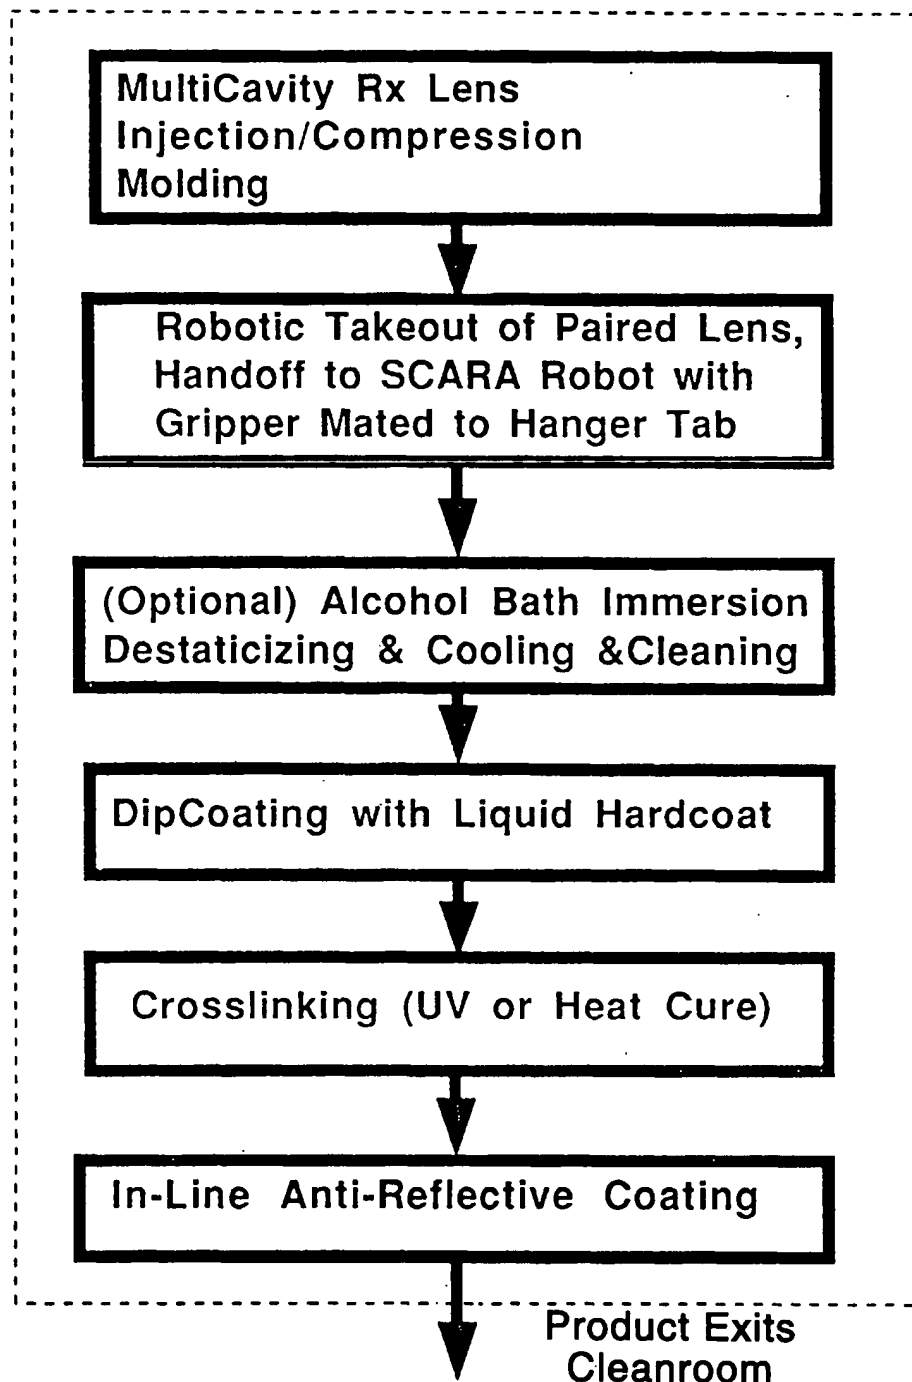


FIG. 4D:
In-Line Automated AR Vacuum Coat of "Mold and Dipcoat"
("Continuous Process")